
EMCHD 6140 GB

QUICK REFERENCE GUIDE

CONTROL PANEL

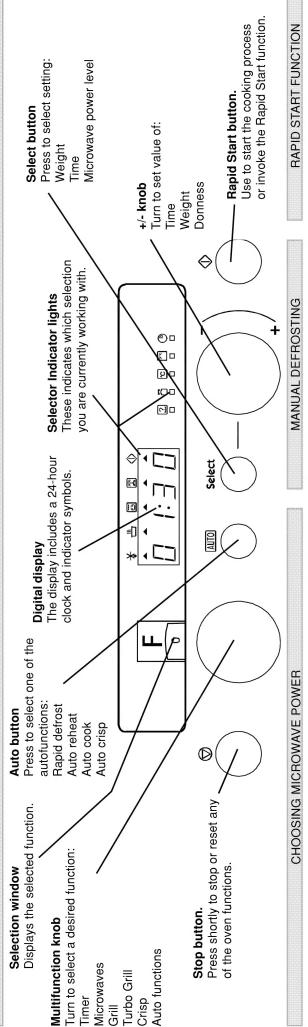

MICROWAVES ONLY

To be used for:

RAPID / 900 WReheating of beverages, water, clear soups, coffee, tea or other food with a

high water content. If the food contains egg or cream choose a lower power. Cooking of vegetables, fish, meat etc. 750 W 650 W

Cooking dishes, not possible to stir.

More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles. 500 W

Simmering stews, melting butter. Defrosting. 350 W 160 W

Softening butter, cheese and ice cream. M 06 06

Setting the standing time.

FORCED AIR MICROWAVES & GRILL / TURBO GRILL To be used for: Level

Vegetables, gratins Fish, fruit 90 - 160 W 160 - 350 W

Lasagne, poultry To be used for: Roasts, cakes 90 - 160 W 160 - 350 W Level

This function is used for defrosting food not included in the Rapid defrost function.

Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting manually.

food with a high water content such as; clear This function is used for quick reheating of soups, coffe or tea.

increases the time with 1/2 min. You may also microwave power level and the cooking time alter the time by turning the Adjust knob to set to 30 seconds. Each additional press Press to automatically start with full increase or decrease the time.

This button also works as a normal start outton after setting a function.



QUICK REFERENCE GUIDE

AUTO

AUTO FUNCTIONS

QUICK GUIDE

- Turn the multifunction knob to the Auto position.
- 2. **Press** the Auto button to select the desired auto function.
- Turn the +/- knob to choose desired food class.
- Press the Select button (default weight is displayed).
- Turn the +/- knob to set the weight of the food.
- - Press the Start button.

Midway thru the process, the oven may STOP and prompt you to "TURN or STIR FOOD":

- Don't use the stop button!
- Just open the door and turn the food.
- Close, and restart with the Rapid Start button.

Automatic but less perfect results:

If you do not turn the food when the oven prompts you to do so, the oven will

will be longer in this case and the result will be less perfect, than it would have been if you had AUTOMATICALLY RESTART after 1 minute. The oven then completes the process. The time turned the food when prompted to do so.

RAPID DEFROST

Jse this function for defrosting ONLY. Rapid categories listed here. Use manual defrost for defrosting of frozen food belonging to the Defrost can only be used for very fast other food or weights not listed.

- Input, with the max. possible precision, the

PLEASE NOTICE

To achieve perfect results it is

NECESSARY to:

WEIGHT of the food selected.







400 g - 1 Kg)

2 FROZEN LASAGNE

(800 g - 1½ Kg)

1 CHICKEN

5 BREAD

(100 g - 2 Kg)

4 VEGETABLES

(100 g - 2 Kg)

(100 g - 2 Kg) 3 FISH

100 g - 3 Kg) 2 POULTRY

(100 g - 2 Kg)

1 MEAT

GRILL

Cheese toast & Hot sandwich Use this function when cooking:

Sausages

Grill spit

Pommes Duchesse

Gratinated fruit

During the heating process the oven may

PLEASE NOTICE

stop and prompt you to "STIR" food.

AUTO REHEAT AUTO T

readymade food or milk. Auto Reheat can be used for food belonging to the categories Use this function when reheating isted here.



米米米



Use this function when cooking:

Potato gratin

Fish gratin

TURBO GRILL

8 **K**

> 5 CASSEROLE (200 g - 800 g) (250 g - 600 g) (100 g - 500 g)



Chicken pieces

-asagne

AUTO CRISP AUTO

Auto Crisp is used only for frozen ready PLEASE NOTICE made food and fish fingers Use this function to quickly reheat your food from frozen to serving temperature.









5 FISH



(300 g - 800 g) 3 PAN PIZZA

2 PIZZA, thin crust (200 g - 500 g)

1 FRENCH FRIES

(200 g - 600 g)

(200 g - 600 g)

(200 g - 600 g) FINGERS

After the PRE-HEATING process the oven

PLEASE NOTICE


will stop and prompt you to "ADD" food.

AUTO FA COMBI

AUTO

frozen. Auto Cook can only be used for food belonging to the categories listed here. Use 'Forced air or Forced air & microwaves" for Use this function for cooking from raw or other food or weights not listed.





BREAD DOUGH 4 CANNED

ROLLS

\$\mathcal{O}\mathcal{O **5 FROZEN**

TECHNICAL SPECIFICATION

Supply voltage	230 V/50 Hz
Rated Power Input	3000 W
Fuse	16 A (UK 13 A)
MW output power	M 006
Grill	1600 W
FA	1450 W
	H x W x D
Outer dimensions:	455 x 595 x 560
Oven compartment:	210×450×420



NOTE: Never operate the oven empty when using microwaves

g

(200 g - 800

2 SOUP

1 DINNER PLATE

(250 g - 600 g)

Stuffed vegetables